

Instruction Manual for Scalp Analysis Machine

Table of Contents

- 1. Introduction
- 2. Safety Instructions
- 3. Components Overview
- 4. Installation Guide
- 5. Operation Instructions
- 6. Warranty Information

1. Introduction

NcLux is a provider of luxury head spa equipment designed by salon owners for salon owners. The company was founded by Nicole Pisani, who began her career as a stylist and eventually owned and operated her own salon. She expanded her business into a day spa and was the first in South Carolina to introduce the Japanese Head Spa Service. Her mission is to help other salons achieve similar success and innovation.

The NcLux Scalp Analysis Machine is an essential tool for salons to offer personalized hair care. The Scalp Analysis Machine comes equipped with a Scalp Analyzer, a High-Frequency Comb, a Meridian Brush, a Massage Brush, and an Oxygen Sprayer for specialized treatments.

Key Features:

- High-Resolution Imaging: Equipped with a powerful camera, it captures ultra-clear images of the scalp, revealing every detail from hair follicles to skin conditions. Assess scalp conditions like dryness, oiliness, dandruff, sensitivity, or clogged follicles with precision. Tailor your treatments and product recommendations to match your client's specific needs.
- High-Frequency Comb: The gentle electrical currents increase blood circulation to the scalp, encouraging healthier, faster-growing hair. It helps strengthen hair follicles and reduces thinning or shedding over time. Kills bacteria and soothes inflammation, leaving the scalp clean and balanced. Promotes better oxygenation and removes toxins for a healthier scalp environment. Prepares the scalp to absorb oils, serums, and treatments more effectively.
- Oxygen Sprayer: By delivering nutrients directly to the scalp, the spray gun helps
 nourish hair follicles, strengthen strands, and support optimal growth conditions. The
 spray gun ensures that treatments are delivered directly to problem areas, minimizing
 product wastage and maximizing effectiveness. The fine mist created by the spray gun
 promotes better absorption of active ingredients. The spray gun can be used with a wide
 range of therapeutic solutions tailored to specific scalp needs.
- Meridian Brush: Inspired by traditional Chinese medicine, it helps harmonize the body's natural energy flow. Gently stimulates scalp meridians to improve blood flow, supporting healthy hair growth. Relaxes scalp muscles and eases stress, creating a calming experience your clients will adore. Helps remove buildup and unclogs pores, leaving the scalp clean and refreshed. Boosts the effectiveness of treatments by allowing products to penetrate deeper.
- Massage Brush: Gentle vibrations provide a soothing massage, reducing tension and stress for your clients. Stimulates blood flow to the scalp, supporting healthier hair growth and stronger roots. Helps distribute and absorb serums, oils, and treatments more evenly and effectively. Helps remove buildup and invigorates the scalp for a clean, refreshed feeling.

Investing in a scalp analysis machine isn't just about adding a tool—it's about transforming your salon into a destination for cutting-edge, personalized haircare. Your clients deserve more than just hair care; they deserve personalized solutions.

2. Safety Instructions

- Read Before Use: Read this manual thoroughly before installing or using the product.
- Proper Use: Do not use the Scalp Analysis Machine for purposes other than intended.
- **Electrical Components:** Do not plug into an extension cord. The Meridian Brush and the High-Frequency Comb may cause a mild shock sensation; this is normal but should be handled carefully.
- **Regular Cleaning:** Make sure each component of the machine is cleaned after each use.

• **Health Risk:** Do not use the Meridian Brush or the High-Frequency Comb on clients with pacemakers, those who are breastfeeding, or those with similar conditions.

3. Components

- 1. Base (A1)
- 2. Tool Stand (A2)
- 3. Camera (A3)
- 4. High-Frequency Comb (A4)
- 5. Oxygen Sprayer (A5)
- 6. Meridian Brush (A6)
- 7. Massage Brush (A7)

A1 - Base




A4 - High-Frequency Comb



A7 - Massage Brush



A2 - Tool Stand

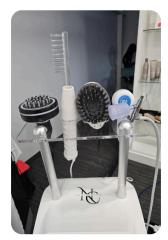

A5 - Oxygen Sprayer





A3 - Camera



A6 - Meridian Brush





4. Installation Guide

Setup Instructions for the Scalp Analysis Machine:

1. Attach Base Components

- a. Locate the two silver poles.
- b. Screw the poles into the top of the base computer securely.
- c. Attach the clear shelving to the top of the silver poles. Make sure the openings for each tool are facing the back of the machine so the cords hang in the back of the camera monitor.
- d. Important: Remove all protective plastic from the shelving before installation.

2. Plug In Tools

- a. On the back of the base computer, you will see designated outlets for each tool.
- b. Match plugs to the correct outlets, then organize cords to prevent tangling.
- c. Tool Lineup Order (left to right):
 - i. Meridian Brush
 - ii. High-Frequency Comb
 - iii. Massage Brush
 - iv. Scalp Analysis Camera
 - v. Oxygen Spray Tool

3. Power On System

- a. Plug the system into an electrical outlet.
- b. Turn on the base computer.
- c. Each tool has its own dedicated button for activation. Simply press the corresponding button to use.

5. Operational Instructions

Operational Instructions for the Scalp Analysis Machine:

1. Meridian Brush

- **a. How to Use:** Use on dry hair. Select the desired heat, vibration, or red light therapy settings using the buttons on the back of the brush.
- **b. Benefits:** Improves blood circulation, relaxes scalp muscles, and stimulates hair growth. The red light therapy also promotes cell regeneration and strengthens hair follicles.
- **c. Caution:** Avoid use on individuals with pacemakers, breastfeeding clients, or those with similar conditions.

2. High-Frequency Comb

a. How To Use: Use the dial at the bottom of the handle to set the desired level. Perform a test on the inside of your arm before using it on a client.

- **b. Benefits:** Reduces dandruff, promotes hair growth by increasing blood flow, and helps control scalp infections.
- **c. Caution:** Avoid use on individuals with pacemakers, breastfeeding clients, or those with similar conditions.

3. Oxygen Sprayer

- a. How to Use: Load the tool with liquids free of granules, such as serums or scalp solutions. After use, flush the tool with warm water and vinegar to prevent buildup.
- Benefits: Hydrates and nourishes the scalp, enhances product absorption, and provides a soothing cooling effect.

4. Massage Brush

- **a. How to Use:** Select from three massage modes using the button. Apply gently to the scalp to relax muscles and stimulate circulation.
- Benefits: Relieves tension, boosts blood circulation, and helps relax scalp muscles. Regular use can reduce headaches and improve overall scalp health.

5. Scalp Analysis Camera

- a. How to Use: Hold the camera steady against the scalp. Press the picture button to freeze the image. Use the zoom buttons to adjust magnification for detailed analysis.
- b. **Benefits:** Identifies issues such as dandruff, buildup, clogged follicles, or hair thinning, allowing for a customized treatment plan.

6. Warranty Information

- The parts of the machine are covered under a 60-day limited warranty from the date of purchase.
- The warranty covers defects in materials and workmanship.
- Damage caused by improper use or installation is not covered.

For service, contact our support team.

Email: <u>ncluxheadspaequipment@gmail.com</u>

Instagram: <a>@head spa equipment

Facebook: https://www.facebook.com/share/15wLtCLSHM/?mibextid=wwXlfr